


ExpressCard 500p

CARD PERSONALIZATION DEVICE

QUICK INSTALLATION GUIDE

PACKAGE CONTENTS

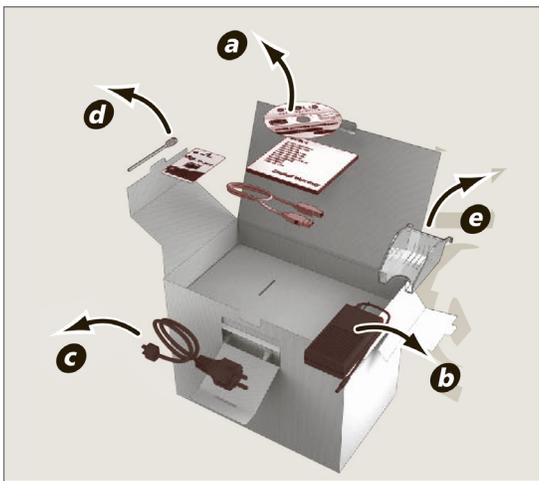


- a. Device driver and warranty
- b. Power pack
- c. Power cord
- d. High Trust® cleaning supplies
- e. Card output hopper

DEVICE DIAGRAMS




- A - Card stock feeder
- B - Card output hopper
- C - Control panel
- D - USB connector (type A)
- E - USB connector (type B)

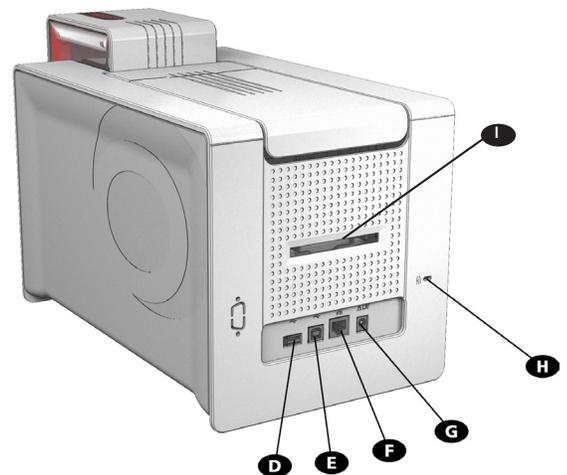

- F - Ethernet connector
- G - Power cable socket
- H - Place for Kensington lock/security anchor
- I - Place for card rejection bin

1. CONNECT, PLUG AND LOAD DRIVER

Connect the cables to the power supply "brick" first. Then connect to EC500p. Then plug the power cable into the wall outlet.

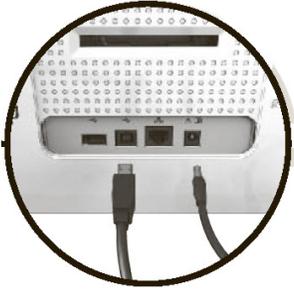

Connect the cables to the power supply brick first. Then, plug the cables into the EC500p.



Plug the device into the power outlet.




Load the device driver.


2. CONNECT USB AND INSTALL RIBBON



Plug the USB cable into the PC.

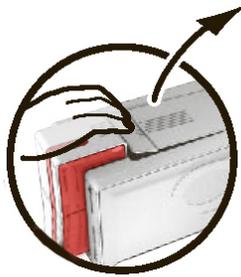

To Load ribbon: open the top access door (unlock if applicable).

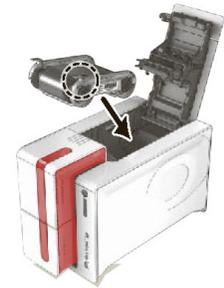


Install the ribbon. Ribbon drops into place (clips to the front of the device.)


3. LOAD CARDS



Load card stock: open card stock hopper (unlock if applicable).

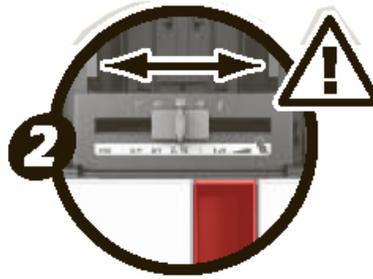


Set card thickness.

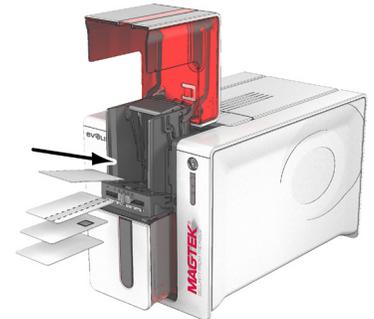


Manually place cards with themagstripe down, right-side (facing the device).

4. ISSUE CARD STOCK

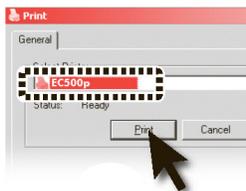

Press the Print button in the device driver.

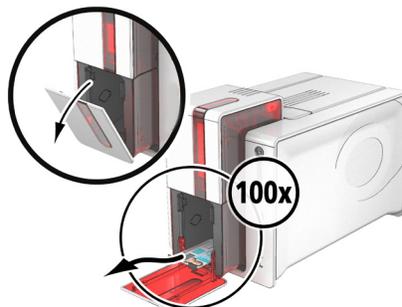

Issue card stock