

# ExpressCard 2000, ExpressCard 3000

**Instant Issuance Card Personalization System  
Replacement Kits List  
D99875730-51**

## 1 Maintenance and Service

Part Number	Description	Procedure
33011008	ASSEMBLY, FIELD SERVICE TOOL KIT, EC2000, EC3000	D99875607
33011009	ASSEMBLY, FIELD SERVICE SPARE PARTS STARTER KIT, EC2000, EC3000	D99875607
97200153	ASSEMBLY, FIELD SERVICE PREVENTIVE MAINTENANCE KIT, EC2000	D99875651 D99875646
1000005420	ASSEMBLY, FIELD SERVICE PREVENTIVE MAINTENANCE KIT, EC3000	D998200294 D998200295
96700027	ASSEMBLY, CLEANING KIT, CARDS PENS WIPES, EC2000, EC3000	D99875600 D998200281
96700021	CLEANING ACCESSORY, IMAGE PRINTER CLEANING PEN, EC500P, EC2000, EC3000	D99875600 D998200281
96700022	CLEANING ACCESSORY, ALCOHOL CLEANING CARD, 50 PACK	D99875600 D998200281
96700023	CLEANING ACCESSORY, ALCOHOL WIPE, 40 PACK	D99875600 D998200281

## 2 Outer Shell and Spares

Part Number	Description	Procedure
33070954	ASSEMBLY, REPLACEMENT KIT, 1 HOPPER, EC2000, EC3000	D99875600
33070930	ASSEMBLY, REPLACEMENT KIT, 7 HOPPERS, EC2000, EC3000	D99875600
33070990	ASSEMBLY, REPLACEMENT KIT, AC POWER FILTER, EC2000, EC3000	D99875720
33070941	ASSEMBLY, REPLACEMENT KIT, POWER SUPPLY, EC2000, EC3000	D99875717
33070242	ASSEMBLY, REPLACEMENT KIT, ETHERNET JACK, EC2000, EC3000	D99875721
33070940	ASSEMBLY, REPLACEMENT KIT, TOUCHSCREEN MONITOR, EC2000, EC3000	D99875716
93600170	ELECTRONIC EQUIPMENT, TOUCHSCREEN STYLUS, EC2000, EC3000	D99875600
33070247	ASSEMBLY, REPLACEMENT KIT, FRONT AND SIDE COVERS WITH MONITOR, EC2000, EC3000	D99875701
33070921	ASSEMBLY, REPLACEMENT KIT, FRONT AND SIDE COVERS, NO TOUCHSCREEN, EC2000, EC3000	D99875701
33070606	ASSEMBLY, REPLACEMENT KIT, TOP ACCESS DOOR WITH LOCK, EC2000	D99875696
1000007246	ASSEMBLY, REPLACEMENT KIT, TOP ACCESS DOOR WITH LOCK, EC3000	D99875696
33070924	ASSEMBLY, REPLACEMENT KIT, FRONT COVER, EC2000, EC3000	Ask
33070922	ASSEMBLY, REPLACEMENT KIT, RIGHT SIDE COVER, EC2000, EC3000	D998200045
33070923	ASSEMBLY, REPLACEMENT KIT, LEFT SIDE COVER, EC2000, EC3000	Ask
1000002146	ASSEMBLY, REPLACEMENT KIT, RIGHT LATCH, EC2000, EC3000	D998200041
1000003697	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER COVER, EC2000	D998200131
Ask	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER COVER, EC3000	Ask
1000007259	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER CARD CLEANING ROLLER, EC2000 OEM-D ECP2, EC3000 ALL MODELS	Ask

### 3 Replacement Modules and Related Parts

Part Number	Description	Procedure
33070934	ASSEMBLY, REPLACEMENT KIT, EMBOSSER MODULE WITH REAR INDENT, EC2000, EC3000	D99875705
1000003960	ASSEMBLY, REPLACEMENT KIT, EMBOSSER MODULE WITH REAR INDENT, AMEX, EC2000, EC3000	D99875705
33070936	ASSEMBLY, REPLACEMENT KIT, EMBOSSER MODULE WITH REAR INDENT, VISA ELECTRON, EC2000, EC3000	D99875705
33070933	ASSEMBLY, REPLACEMENT KIT, EMBOSSER MODULE, EC2000, EC3000	D99875705
33070937	ASSEMBLY, REPLACEMENT KIT, EXIT TRANSPORT MODULE, EC2000, EC3000	D99875714
33070929	ASSEMBLY, REPLACEMENT KIT, HOPPER MODULE, NO HOPPERS, EC2000, EC3000	D99875700
33070243	ASSEMBLY, REPLACEMENT KIT, HOPPER TRANSPORT FLEX CABLE, EC2000, EC3000	D998200047
33070931	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER MODULE, EC2000, EC2000 OEM-D ECP1	D99875702
33070999	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER MODULE, CONTACTLESS, EC2000, EC2000 OEM-D ECP1	D99875702
33070948	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINT HEAD, EC2000, EC2000 OEM-D ECP1	D99875718
1000005133	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER, EC2000 OEM-D ECP2, EC3000 ALL MODELS	D998200287
1000005241	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINT HEAD, EC3000	D998200288
1000006959	ASSEMBLY, REPLACEMENT KIT, PRINTER EXIT SENSOR PCB, EC200 OEM-D ECP2, EC3000	D998200339
1000007252	ASSEMBLY, REPLACEMENT KIT, IMAGE PRINTER JUSTIFIER, EC200 OEM-D ECP2, EC3000	D998200374
33070938	ASSEMBLY, REPLACEMENT KIT, TIPPER MODULE, 4:1, EC2000, EC2000 OEM-D ECP1	D99875715
1000005239	ASSEMBLY, REPLACEMENT KIT, TIPPER MODULE, 1:1, EC2000 OEM-D ECP2, EC3000 ALL MODELS	D99875715
1000004608	ASSEMBLY, RETROFIT KIT, TIPPER MODULE MOTOR PATCH CABLE, EC2000	D998200225
33070911	ASSEMBLY, REPLACEMENT KIT, TIPPER HEATER, EC2000, EC3000	D99875692
1000004436	ASSEMBLY, REPLACEMENT KIT, TIPPER EXIT RAMP EXTENSIONS RETROFIT, EC2000	D998200206

Part Number	Description	Procedure
33070932	ASSEMBLY, REPLACEMENT KIT, XY TRANSPORT MODULE, EC2000, EC3000	D99875703
33070992	ASSEMBLY, REPLACEMENT KIT, XY CABLE, EC2000, EC3000	D99875704
1000004422	ASSEMBLY, REPLACEMENT KIT, XY TRANSPORT CABLE CLAMP RETROFIT, EC2000	D998200204

## 4 Replacement Boards

Part Number	Description	Procedure
1000002600	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, US VERSION, EC2000	D99875697
1000003693	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, INTERNATIONAL VERSION, EC2000	D99875697
33070926	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, LOW SPEED, US VERSION, EC2000	D99875697
1000003694	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, LOW SPEED, INTERNATIONAL VERSION, EC2000	D99875697
1000005247	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, EC2000 OEM-D ECP1	D99875697
1000005248	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, EC2000 OEM-D ECP2	D99875697
1000007253	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, EC3000, EC3000 OEM	D99875697
1000007255	ASSEMBLY, REPLACEMENT KIT, MAIN LOGIC BOARD MLB TRAY, EC3000 OEM-D	D99875697
33070928	ASSEMBLY, REPLACEMENT KIT, CABLE HARNESS TRAY AND POWER CONTROLLER, EC2000, EC3000	D99875699
33070927	ASSEMBLY, REPLACEMENT KIT, EMBEDDED PC TRAY, EC2000	D99875698
1000007256	ASSEMBLY, REPLACEMENT KIT, EMBEDDED PC TRAY, EC3000, EC3000 OEM	D99875698
1000002864	ASSEMBLY, UPGRADE KIT, WINDOWS 7 WIN7 SOLID STATE DRIVE SSD, EC2000	D998200090
1000003178	ASSEMBLY, REPLACEMENT KIT, WINDOWS 7 SOLID STATE DRIVE SSD, EC2000	D99875719
1000003180	ASSEMBLY, REPLACEMENT KIT, WINDOWS 7 SOLID STATE DRIVE SSD, AMEX, EC2000	D99875719
1000007257	ASSEMBLY, REPLACEMENT KIT, WINDOWS 10 SOLID STATE DRIVE SSD, EC3000	D99875719